

#### Model Number

CVS58

#### **Features**

- Industrial standard housing Ø58 mm
- Servo or clamping flange
- 16 Bit singleturn
- Galvanically isolated CAN interface
- 2 limit switches
- 8 programmable cams
- Velocity and acceleration output
- Event triggered process data transfer

#### Description

Absolute encoders deliver an absolute step value for each angle setting. All these values are represented by code samples on one or more code disks which are sampled by a photoelectric array. The absolute encoder has a maximum basic resolution of 65536 steps per revolution (16 Bits). The encoders integrated CAN bus interface supports all CANopen functions. The following operating modes can be programmed, and can be selectively turned on or off:

- Polled mode
- Cyclic mode
- Sync mode

The device is designed for shaft assembly and is available in servo flange or clamping flange design. The bus electronics module is integrated into the removable housing cover. This makes it possible to mount or replace the encoder and the bus electronics separately during installation or service.

# **Technical data**

General specifications Detection type Device type Functional safety related parameters MTTF<sub>d</sub> Mission Time (T<sub>M</sub>)

L<sub>10h</sub> Diagnostic Coverage (DC) Electrical specifications Operating voltage U<sub>B</sub> No-load supply current I<sub>0</sub>

Time delay before availability t<sub>v</sub> Linearity Output code

Code course (counting direction)

#### Interface

Interface type Resolution Single turn Overall resolution Transfer rate Standard conformity

#### Connection

Terminal compartment Standard conformity Degree of protection

Climatic testing Emitted interference Noise immunity Shock resistance Vibration resistance

Ambient conditions Operating temperature

Storage temperature

Mechanical specifications Material Combination 1

Combination 2 (Inox)

Mass

Rotational speed Moment of inertia Starting torque Shaft load Axial Radial

UL approval

photoelectric sampling Singleturn absolute encoder

#### 80 a 20 a

20 a 1.9 E+11 at 6000 rpm and 20/40 N axial/radial shaft load 0 %

10 ... 30 V DC max. 350 mA < 250 ms ± 2 LSB at 16 Bit, ± 1 LSB at 13 Bit, ± 0,5 LSB at 12 Bit binary code cw ascending (clockwise rotation, code course ascending) cw descending (clockwise rotation, code course descending)

CANopen

up to 16 Bit up to 16 Bit max. 1 MBit/s communication profile: DS 301 Device profiles: DS 406 and DS 417 , programmable according to class 2

in removable housing cover

DIN EN 60529, IP65 IP66 (with shaft seal) DIN EN 60068-2-30 , no moisture condensation EN 61000-6-4:2007 EN 61000-6-2:2005 DIN EN 60068-2-27, 100 g, 6 ms DIN EN 60068-2-6, 20 g, 10 ... 2000 Hz

-40 ... 85 °C (-40 ... 185 °F) -40 ... 85 °C (-40 ... 185 °F)

housing: powder coated aluminum flange: aluminum shaft: stainless steel housing: stainless steel flange: stainless steel shaft: stainless steel approx. 550 g (combination 1) approx. 1100 g (combination 2) max. 12000 min <sup>-1</sup> 30 g cm<sup>2</sup>  $\leq$  3 Ncm (version without shaft seal)

40 N 110 N

Approvals and certificates

cULus Listed, General Purpose, Class 2 Power Source

ž


eng.


Pepperl+Fuchs Group USA: +13 www.pepperl-fuchs.com fa-info@us.pe

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



# Dimensions

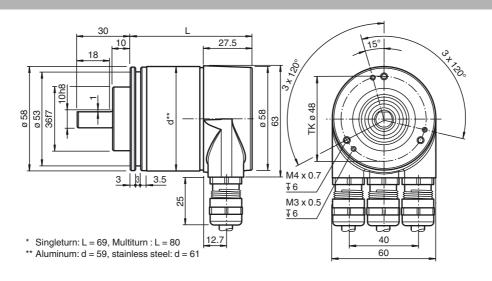

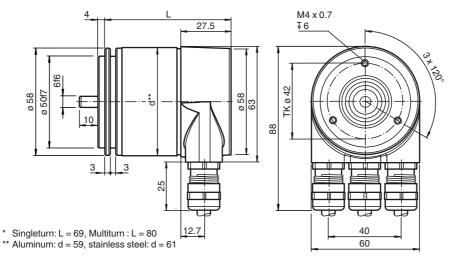


#### **Electrical connection**

Terminal	Cable	Explanation	
$\perp$	-	Ground connection for power supply	
(+)	Red	Power supply	
(-)	Black	Power supply	
G	-	CAN ground	
L	Blue	CAN low	
Н	White	CAN high	
G	-	CAN ground	
L	Blue	CAN low	
Н	White	CAN high	

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group www.pepperl-fuchs.com fa-ir Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



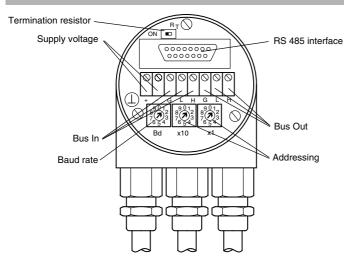


# Adjusting the participant address

The participant address can be adjusted with the rotary switches. The address can be defined between 1 and 96, and may only be assigned once. The addresses 97 ... 99 are reserved.

# Adjusting the termination resistor

The terminating resistor  $R_T$  (121  $\Omega$ ) can be connected to the circuit by means of the switch:

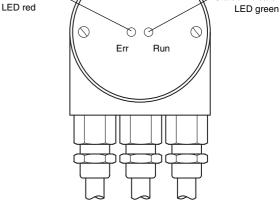

Error indicator





member X



# ON



# Baud rate adjustment

Baud rate [kBit/s]	Switch position	Baud rate [kBit/s]	Switch position
20	0	500	5
50	1	800	6
100	2	1000	7
125	3	reserved	8
250	4	set baud rate by SDO message and LSS	9

#### **LED-indicators**

CAN Run (green)	State	Description	
flickering	AutoBitrate / LSS	Auto-bitrate detection is in progress or LSS services are in progress	
blinking	PREOPERATIONAL	Encoder is in state PREOPERATIONAL	
single flash	STOPPED	Encoder is in state STOPPED	
double flash		reserved	
triple flash	Program / Firmware download	a software download is running on the encoder	
on	OPERATIONAL	the encoder is in state OPERATIONAL	
Err (red)	State	Description	
off	no error	the encoder is in working condition	
flickering	AutoBitrate / LSS	Auto-bitrate detection is in progress or LSS services are in progress	
blinking	invalid configuration	general configuration error	
single flash	Warning limit reached	at least one of the error counters of the CAN controller has reached or exceeded the warning level (too many error frames)	
double flash	double flash Error control event a guard event (NMT-slave or NMT-master) or a heartbeat event (heartbeat mer) has occured		
triple flash	Sync. error	the sync. message has not been received within the configured communication cycle period time out (see objekt 1006h)	
quadruple flash	Error, event-timer	an expected PDO has not been received before the even-timer elapsed	
on	Bus off	the CAN controller is bus off	

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com fa-ir

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Status indicator

# Programmable CAN operating modes

Mode	Explanation
Polled mode	The connected host requests the current actual position value via a remote transmission request telegram. The absolute encoder reads in the current position, calculates all parameters that have been set and sends back the process actual value through the same CAN identifier.
Cyclic mode	The absolute encoder sends the current actual process value cyclically, without being prompted by the host. The cycle time can be programmed in milliseconds for values between 1 ms and 65536 ms.
Sync mode	After the sync telegram has been received by the host, the absolute encoder sends the current actual process value. If multiple nodes should respond to the sync telegram, the individual nodes report one after the other according to their CAN identifier. There is no programming of an offset time. The sync counter can be programmed so that the rotary encoder does not transmit until after a defined number of sync telegrams.

# Programmable rotary encoder parameters

Parameter	Explanation	
Operating parameter	The direction of rotation (complement) can be specified by parameter as the operating parameter. This para- meter determines the direction of rotation in which the output code will ascend or descend.	
Resolution per revolution	The "Resolution" parameter is used to program the rotary encoder so that a desired number of steps can be implemented in reference to one revolution.	
Preset value	The preset value is the desired position value that must be achieved for a specific physical setting of the axis. The preset value parameter is used to set the actual position value to the desired actual process value.	
2 limit switches	A total of two positions can be programmed. The absolute encoder sets one bit to high state in the 32 Bit actual process value if a value falls outside the range between these two positions.	
8 cam switches	Up to 8 position values can be programmed as cams. By reaching these values bits in object 6300h Cam state register are set.	

#### Accessories

For type	Accessories	Name/defining feature	Order code
		D1: Ø10 mm, D2: Ø10 mm	9401
	Couplings	D1: Ø10 mm, D2: Ø10 mm	9404
		D1: Ø10 mm, D2: Ø10 mm	9409
		D1: Ø10 mm, D2: Ø10 mm	KW
	Measurement wheels with cir- cumference of 500 mm	Plastic	9101, 10
		Pimpled rubber	9102, 10
CVS58N-011		Knurled aluminium	9103, 10
CV356IN-011		Knurled plastic	9112, 10
		Plastic	9108, 10
	Measurement wheels with cir- cumference of 200 mm Mounting aids	Pimpled rubber	9109, 10
		Knurled aluminium	9110, 10
		Knurled plastic	9113, 10
		Mounting bracket	9203
		Mounting bracket	9213
		D1: Ø6 mm, D2: Ø6 mm	9401
	Couplings Mounting aids	D1: Ø6 mm, D2: Ø6 mm	9402
		D1: Ø6 mm, D2: Ø6 mm	9404
CVS58N-032		D1: Ø6 mm, D2: Ø6 mm	9409
		D1: Ø6 mm, D2: Ø6 mm	KW
		Mounting bracket and set	9300 and 9311-3
		Eccentric clamping elements	9310-3

For additional information on the accessories, please see the "Accessories" section.

Pepperl+Fuchs Group www.pepperl-fuchs.com

4

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



# Order code

